

### ATTENZIONE - ATTENTION - ACHTUNG

- Per lo smontaggio degli utensili utilizzare sempre la chiave di contrasto come indicato nel manuale d'uso.
- For disassembly of the tools use always the contrast key as mentioned in the user instructions.
- Fuer das Abmontieren der Werkzeuge immer den Gegenschlüssel benutzen wie in der Bedienungsanleitung erwäehnt.

PER PORTAUTENSILI MODULARI MTSK-40 VEDI PAG. TBL300-1-40  
 FOR MTSK-40 QUICK CHANGE TOOLHOLDERS CLAMPINGS SEE PAGE TBL300-1-40  
 FUER MTSK-40 MODULARE WERKZEUGAUFNAHMEN SIEHE SEITE TBL300-1-40

| Cod. MT    | Mandrino Spindle Spindel | I   | RPM  | Coppia Max Max Torque Max Drehmoment | Reversibile lato mandrino/contromandrino Reversible sub/main spindle side Umkehrbare Spindel-seite/ Gegenspindel-seite | Lubr.interna Coolant through Innenkuehlung | Lubr.esterna Ext. coolant Aussenkuehlung | B    | CHIAVI NON INCLUDE Keys not included Schluessel nicht einbegriffen |              |
|------------|--------------------------|-----|------|--------------------------------------|--|--|--|------|--|--------------|
| OKU1650140 | MTSK-40                  | 1:1 | 6000 | 70Nm                                 | X  | -  | X  | 55   | CHUB46   | OKU0650004 ▪ |
| OKU1650240 | MTSK-40                  | 1:1 | 6000 | 70Nm                                 | X  | P=70bar                                    | X  | 63.5 | CHUB46   | OKU0650004 ▪ |

- Chiave inclusa
- Key included
- Schluessel inbegriffen

OKUMA


MOD: MULTUS U3000/4000/5000 2SW - GENOS L300MW /MYW

MODULO MOTORIZZATO ASSIALE MTSK H=90mm

Axial MTSK driven tool H=90mm

Axial MTSK angetriebenes Werkzeug H=90mm

Subject to change without notice.

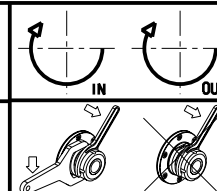

**M.T. srl**

Via Casino Albini 480  
 Tel. 0541/956034-957884  
 Fax 0541/956341  
 47842 S. GIOVANNI IN M. (RN)  
 e-mail: mtma@mtmarchetti.com  
 http://www.mtmarchetti.com



PAGINA OKU150-4-20-K