

### ATTENZIONE - ATTENTION - ACHTUNG

- Per lo smontaggio degli utensili utilizzare sempre la chiave di contrasto come indicato nel manuale d'uso.
- For disassembly of the tools use always the contrast key as mentioned in the user instructions.
- Fuer das Abmontieren der Werkzeuge immer den Gegenschlüssel benutzen wie in der Bedienungsanleitung erwaeht.

- Chiave inclusa
- Key included
- Schluessel inbegriffen

Cod. MT	Mandrino Spindle Spindel	I	RPM	Coppia Max Max Torque Max Drehmoment	Reversibile lato mandrino/contromandrino Reversible sub/main spindle side Umkehrbare Spindelsetseite/ Gegenspindelsetseite	Lubr.interna Coolant through Innenkuehlung	Lubr.esterna Ext. coolant Aussenkuehlung	A	B	CHIAVI NON INCLUDE Keys not included Schluessel nicht einbegriffen		
										CHUB30	OKU0650004	CHTAER32ZC
OKU1640132	ERA32	1:1	6000	70Nm	X	-	X	87	55	CHUB30	OKU0650004	CHTAER32ZC
OKU1640232	ERA32	1:1	6000	70Nm	X	P=70bar	X	87	63.5	CHUB30	OKU0650004	CHTAER32ZC
OKU1640340	ER40	1:1	6000	70Nm	X	-	X	111.66	55	-	OKU0650004	CHSTER40
OKU1640440	ER40	1:1	6000	70Nm	X	P=70bar	X	111.66	63.5	-	OKU0650004	CHSTER40

OKUMA


MOD: MULTUS U3000/4000/5000 2SW - GENOS L300MW/MYW

MODULO MOTORIZZATO ASSIALE H=90mm

Axial driven tool H=90mm

Axial angetriebenes Werkzeug H=90mm

Subject to change without notice.

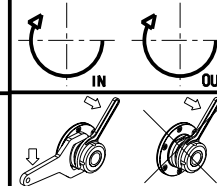

**M.T. srl**

Via Casino Albini 480  
Tel. 0541/956034-957884  
Fax 0541/956341  
47842 S. GIOVANNI IN M. (RN)  
e-mail: mtma@mtmarchetti.com  
http://www.mtmarchetti.com



PAGINA OKU150-4-20