

ATTENZIONE - ATTENTION - ACHTUNG

- Per lo smontaggio degli utensili utilizzare sempre la chiave di contrasto come indicato nel manuale d'uso.
- For disassembly of the tools use always the contrast key as mentioned in the user instructions.
- Fuer das Abmontieren der Werkzeuge immer den Gegenschluessel benutzen wie in der Bedienungsanleitung erwaeht.


- Chiave inclusa
- Key included
- Schluessel inbegriffen

Cod. MT	Cod. TAKISAWA	Mandrino Spindle Spindel	I	RPM	Coppia Max Max Torque Max Drehmoment	Lubr.interna Coolant through Innenkuehlung	Lubr.esterna Ext. coolant Aussenkuehlung	A	A1	B	D	L	CHIAVI NON INCLUDE Keys not included Schluessel nicht einbegriffen		
TKW 014 1125	-	ER25	1:1	6000	65Nm	-	X	91.16	-	54.5	-	-	-	CHSTER25	OKU0650004 •
TKW 014 1132	GM81998-642L	ER32	1:1	6000	65Nm	-	X	93.66	-	54.5	-	-	-	CHSTER32	OKU0650004 •
TKW 014 1140	-	ER40	1:1	6000	65Nm	-	X	98.16	-	54.5	-	-	-	CHSTER40	OKU0650004 •
TKW 014 1325	-	ERA25	1:1	6000	65Nm	-	X	65	-	54.5	-	-	CHUB27	CHTAER25ZC •	OKU0650004 •
TKW 014 1225	-	ER25	1:1	6000	65Nm	P=70bar	X	91.16	-	67	-	-	-	CHSTER25	OKU0650004 •
TKW 014 1232	-	ER32	1:1	6000	65Nm	P=70bar	X	93.66	-	67	-	-	-	CHSTER32	OKU0650004 •
TKW 014 1240	-	ER40	1:1	6000	65Nm	P=70bar	X	98.16	-	67	-	-	-	CHSTER40	OKU0650004 •
TKW 014 14 25	-	ERA25	1:1	6000	65Nm	P=70bar	X	65	-	67	-	-	CHUB27	CHTAER25ZC •	OKU0650004 •
TKW 014 1516	-	Ø16x17	1:1	6000	65Nm	-	X	-	67.5	54.5	16	17	-	CH_VTCROCE_M08	OKU0650004 •
TKW 014 1522	-	Ø22x19	1:1	6000	65Nm	-	X	-	67.5	54.5	22	19	-	CH_VTCROCE_M10	OKU0650004 •
TKW 014 1527	-	Ø27x21	1:1	6000	65Nm	-	X	-	70	54.5	27	21	-	CH_VTCROCE_M12	OKU0650004 •

TAKISAWA
MOD: TMM200/250 - TNR200

MODULO MOTORIZZATO ASSIALE PER CONTROMANDRINO VD140
Axial driven tool for subspindle VD140
Axial angetriebenes Werkzeug fuer Gegenspindel VD140

Subject to change without notice.

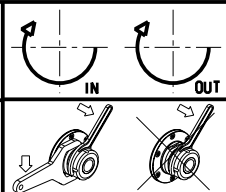

M.T. srl
Via Casino Albini 480
Tel. 0541/956034-957884
Fax 0541/956341
47842 S. GIOVANNI IN M. (RN)
e-mail: mtma@mtmarchetti.com
http://www.mtmarchetti.com



PAGINA TKW 155-3-15